

SAMSUNG OFFICESERV STATION TIMERS NO ANSWER PROGRAMMING GUIDE

NO ANSWER TIMER

This timer controls how long the station will ring before Forward on No Answer takes place. The default setting is 15 seconds although you can change the time to anything from 1-250 seconds.

To program the setting

From any handset press the [Transfer key] enter [2] [0] [0]

The screen should show

ENABLE CUS.PROG.

PASSCODE:

Enter [1] [2] [3] [4] – this is the default system admin password

The screen should now show

ENABLE CUS.PROG.

DISABLE

Enter [1]

The screen should now show

ENABLE CUS.PROG.

ENABLE

Press the blue [SPEAKER] key

The screen should now show

201: CUS.PASSCODE

SELECT PROG ID

CONTINUED ON NEXT SHEET



SAMSUNG OFFICESERV STATION TIMERS NO ANSWER PROGRAMMING GUIDE

Enter [5] [0] [2]

The screen should now show

**[201]: NO ANS FWD
015 SEC ->**

Enter the extension number of the handset you want to change for
example 205 enter [2] [0] [5]

The screen should now show

**[205]: NO ANS FWD
015 SEC ->**

Now you need to press the Right hand soft key under the display to
move the Cursor to the blank area.

You can now enter the time (in three digit format)

e.g. [0] [3] [0] for 30 seconds you can enter any time in a second for-
mat from 1 to 250 seconds

You can then select another extension number or push the [Transfer
key] to save and exit.



HEADSET COMPATIBLE

All Samsung digital handsets are
headset compatible, please contact
your account manager for options
and prices

Tel: 0845 88 88 698

FOR MORE TECHNICAL TIPS PLEASE VISIT

WWW.PRPTTELECOM.CO.UK